

HOW TO CONFIGURE THE TECHNICAL SETTINGS

ENTER THE TECHNICAL SETTINGS PROGRAMMING



PRESS AND HOLD FOR 5 SECONDS

AUTOLEVEL WITH PUMP



Led ON = Pump enable

Led OFF = Pump disable

PRESS TO ENABLE OR DISABLE

DEGASSING




Led ON = Degassing enable

Led OFF = Degassing disable

PRESS TO ENABLE OR DISABLE

SOFTWARE PROGRAMMING

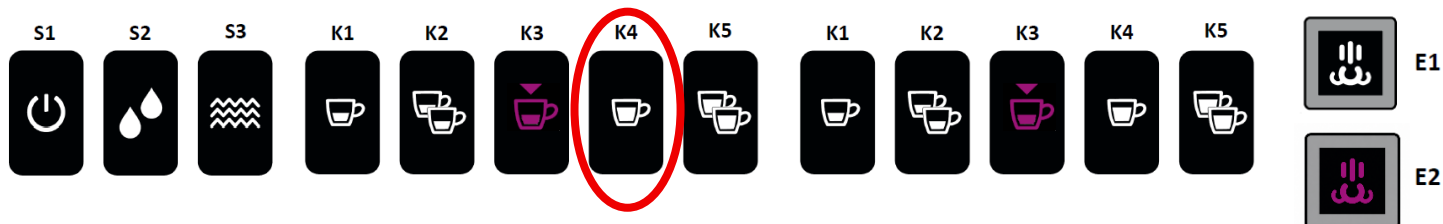


Led ON = Programming enable

Led OFF = Programming disable

PRESS TO ENABLE OR DISABLE

CUPWARMER

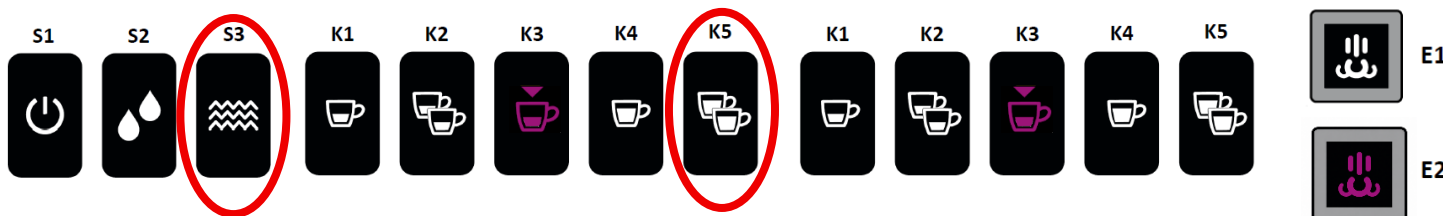

Led ON = Cupwarmer enable

Led OFF = Cupwarmer disable

PRESS TO ENABLE OR DISABLE

(it's possible to use both buttons)

GRIND COMM



Led ON = Grind comm enable

Led OFF = Grind comm disable

PRESS TO ENABLE OR DISABLE

KASSA



Led ON = Kassa enable

Led OFF = Kassa disable

PRESS TO ENABLE OR DISABLE

CSI2



Led ON = CSI2 enable

Led OFF = CSI2 disable

PRESS TO ENABLE OR DISABLE

(Both buttons must be enabled)

AUTOLEVEL WITH HOT WATER



Led ON = Autolevel may activate during hot water dispensing

Led OFF Autolevel disabled during hot water dispensing

PRESS TO ENABLE OR DISABLE

AUTOLEVEL WITH COFFEE



Led ON = Autolevel may activate during coffee brewing

Led OFF = Autolevel disabled during coffee brewing

PRESS TO ENABLE OR DISABLE

GROUP LIGHTS



Led ON = group lights activated

Led OFF = group lights deactivated

PRESS TO ACTIVATE OR DISACTIVATE

HOT WATER WITH PUMP




Led ON = Pump enable

Led OFF = Pump disable

PRESS TO ENABLE OR DISABLE

CUPWARMER

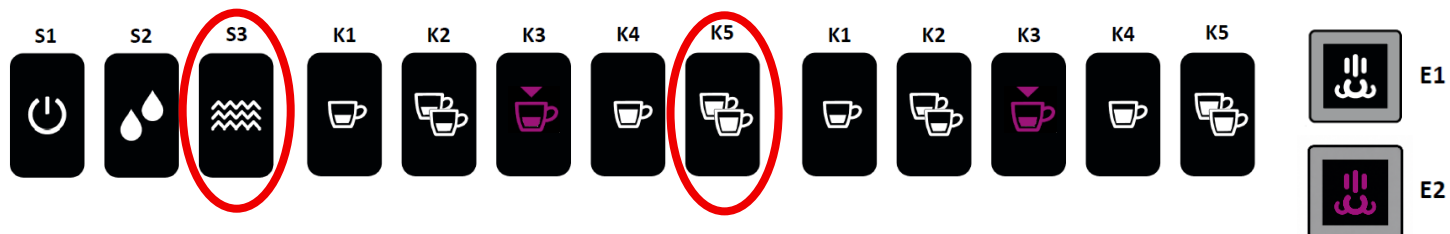

Led ON = cupwarmer enable

Led OFF = cupwarmer disable

PRESS TO ENABLE OR DISABLE

(it's possible to use both buttons)

E-STEAM / E-MILK



Led ON = E-steam configuration

Led OFF = E-Milk configuration

PRESS TO SET THE CONFIGURATION

E-MILK MODE



Led ON = E-Milk in time mode

Led OFF = E-Milk in temperature mode

PRESS TO SET THE AIR MODE

SPECIAL SETTINGS

RESTORE THE DEFAULT DOSES



To reset the doses in the other groups, **PRESS THE CONTINUOUS BUTTON ON GROUP 1 FOR 10S**

COPY DOSES



PRESS THE CONTINUOUS BUTTON ON GROUP 2/3 FOR 10S TO COPY THE DOSES FROM GROUP 1

UNLOCK SOFTWARE PROGRAMMING



**POWER ON THE MACHINE
+
PRESS FOR 5 SECONDS**